

Servos de freno a aire

Air brake servos

Servos de freio a ar






	Código / Code	Modelo / Model	Kit
	R-0600	Chevrolet C60	 R-0640
	R-0620	Dodge DP600	 R-0730  R-0660
	R-0610	Ford F 700	 R-0670

Servos de freno a aire

Air brake servos
Servos de freio a ar

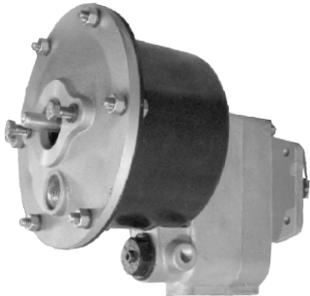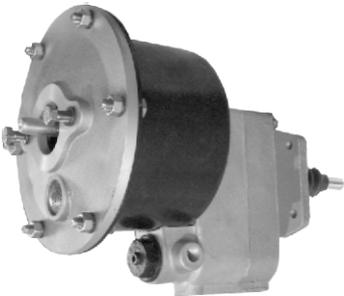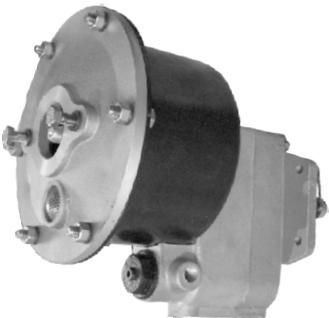



	Código / Code	Modelo / Model		Kit
	R-0624	Metalfor	para bomba simple K-9920 Ø 1" 1/8	 <p>R-0640</p>
	R-0625	Metalfor Pla Tedeschi	para bomba simple K-9920 Ø 1" 1/8	 <p>R-0730</p>
	R-0626	Caimán Metalfor	para bomba D.C. K-9922 Ø 1" 1/8	 <p>R-0660</p>
	R-0627	Caimán	para bombas D.C. K-9924 y K-9927 Ø 1" 1/4	 <p>R-0670</p>

Servos de freno a aire

Air brake servos

Servos de freio a ar

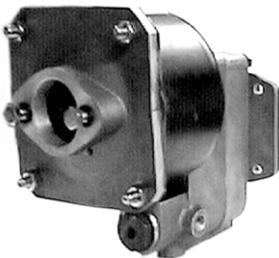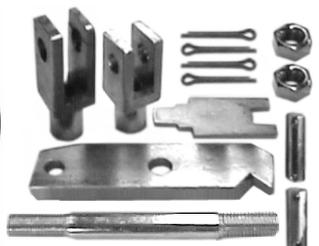

	Código / Code	Modelo / Model	Kit
	R-0630	Mercedes Benz L 608	 <p>R-0650</p>  <p>R-0730</p>  <p>R-0660</p>
	R-4100	Mercedes Benz L 1112 L 1114 L 1517 Original N° 344 431 70 14	 <p>R-4110</p>  <p>R-4111</p>  <p>R-4130</p>  <p>R-4140</p>  <p>R-4150</p>
	R-5400	Mercedes Benz L 608 Original N° 000 431 43 14	 <p>R-5410</p>